

WARNINGS

- Keep hands and fingers away from moving parts when folding or unfolding.
- Only clean with a damp, soft cloth or air line. Never clean with a hose pipe or pressure washer.

FOR FULL INSTRUCTIONS & TROUBLESHOOTING PLEASE REFER TO THE VIDEO GUIDE AT STEWARTGOLF.COM/R1SPUSH



WARRANTY

Stewart Golf warrants the R1-S Push to be free from manufacturing or material defects for a period of two (2) years (when registered) from the date of purchase. The warranty does not cover normal wear & tear, damage that occurs through abuse, accident, neglect or failure to follow the instructions or warnings contained in the user guide. Stewart Golf is the sole judge of any and all warranty claims. Proof of purchase is required.

DOUBLE YOUR R1 PUSH WARRANTY TO TWO YEARS - FREE OF CHARGE

Simply register your purchase at stewartgolf.com/warranty

DESIGN PROTECTION:

This product is protected by the following registrations:

GB Patent: GB2513930

European Design Registration: 2475913 & 2478545

US Patent Application: 14/465,980

For more information & other regions visit www.stewartgolf.com/IP.



STEWARTGOLF

DREAM MACHINES



StewartGolf
GREAT BRITAIN

R1-S PUSH

OWNER'S MANUAL & USER GUIDE

Congratulations on becoming the owner of a Stewart Golf R1-S Push. This product has been hand built in Great Britain to our usual exacting standards, thank you for choosing a Stewart Golf product.

Warning and important safety instructions contained in this guide are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when operating or cleaning this product.

- Please read this short guide in full before you attempt to unpack, assemble or use the product.
- This trolley is designed solely for the transportation of golf equipment on a golf course.
- Always follow the folding instructions carefully.
- Ensure that you keep clear of moving parts while unfolding, folding or adjusting the product.
- Always use the brake when parking the trolley to ensure it does not roll away.

UNPACKING AND UNFOLDING

Please follow this guide, or visit stewartgolf.com/R1SPush for a video guide.

- Remove the R1-S Push from the box and sit the trolley on the floor.
- Rock the R1-S Push backwards so the bag jaws are up in the air. (Fig 1)
- Loosen the handle knob (Fig 2) and rotate the handle so it is vertical. (Fig 3)
- Tighten the handle knob. (Fig 2)
- Hold the handle in one hand and rotate the trolley forward so the white frame lock is accessible, then open the frame lock. (Fig 4)
- Lift the handle, pulling upwards until the frame is fully open. (Fig 5). **DO NOT STEP** on the frame when unfolding. Doing so may damage the trolley and will invalidate your warranty.
- Now close the frame lock. (Fig 6)



Fig 1



Fig 2



Fig 3



Fig 4



Fig 5



Fig 6

FOLDING

- Undo the frame lock (Fig 7) and push the handle up and over until the unit is folded. (Fig 8)
- Close the frame lock to secure the frame. (Fig 9)
- Loosen the handle knob & lower the handle until it comes to rest. Now tighten the handle knob. (Fig 10)



Fig 7



Fig 8



Fig 9



Fig 10



StewartGolf
GREAT BRITAIN